

# SPAREPARTSMANUAL2004


---

ERSATZTEILKATALOG:  
*SPARE PARTS MANUAL:*  
**ERSATZSTECKER**  
**SPARE CONNECTORS**






## ERSATZSTECKER AA - AR SPARE CONNECTOR AA - AR

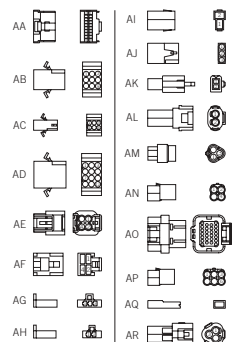


2

## ERSATZSTECKER AS - AJ SPARE CONNECTOR AS - AJ

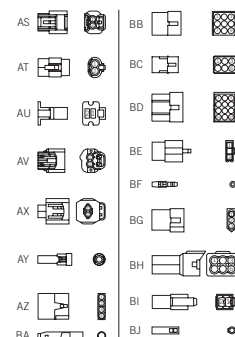


3

## ERSATZSTECKER BK - BZ SPARE CONNECTOR BK - BZ

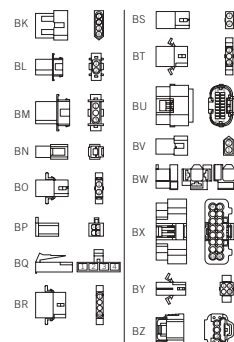

4

## ERSATZSTECKER CA - CR SPARE CONNECTOR CA - CR

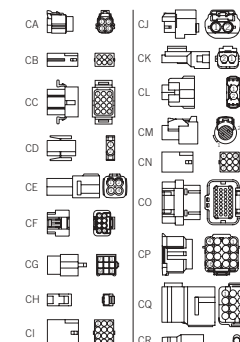


5




Alle enthaltenen Angaben sind unverbindlich. Die KTM-Sportmotorcycle AG behält sich insbesondere das Recht vor, technische Angaben, Preise, Farben, Formen, Materialien, Dienst- und Serviceleistungen, Konstruktionen, Ausstattungen und ähnliches ohne vorheriger Ankündigung und ohne Angabe von Gründen zu ändern bzw. ersatzlos zu streichen, sie an lokale Gegebenheiten anzupassen sowie die Fertigung eines bestimmten Modells ohne vorherige Ankündigung einzustellen. KTM übernimmt keine Haftung für Liefermöglichkeiten, Abweichungen von Abbildungen und Beschreibungen sowie Druckfehler und Irrtümer. Die abgebildeten Modelle enthalten zum Teil Sonderausstattungen, die nicht zum serienmäßigen Lieferumfang gehören.  
© 2004 by KTM-SPORTMOTORCYCLE AG, Mattighofen AUSTRIA; Alle Rechte vorbehalten; Nachdruck, auch auszugsweise, nur mit schriftlicher Genehmigung von KTM-SPORTMOTORCYCLE AG, Mattighofen

*All information contained is without obligation. KTM-Sportmotorcycle AG particularly reserves the right to modify any equipment, technical specifications, prices, colors, shapes, materials, services, service work, constructions, equipment and the like so as to adapt them to local conditions or to cancel any of the above items, all without previous announcement and without giving reasons. KTM may stop manufacturing certain models without previous notice. KTM shall not be held liable for any deviations of availability and/or ability to deliver, illustrations, descriptions, printing and/or other errors. The illustrated models partly contain extra equipment, which is not applied to standard models.*


© 2004 by KTM-SPORTMOTORCYCLE AG, Mattighofen AUSTRIA; All rights reserved; Reprint, also in extracts, with written allowance of KTM-SPORTMOTORCYCLE AG, Mattighofen only.

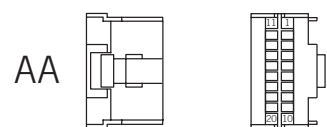


AA

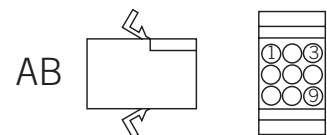


AB

 


AC

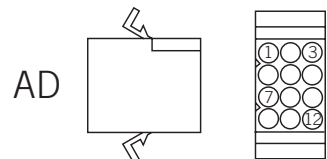

AD

 

AE

 

AF



 
AG



AH




AI




AJ



 AK




AL

 

AM



AN

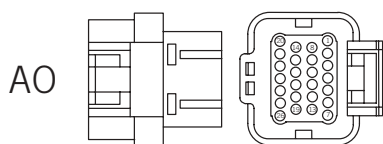


AO



AP



 AQ




AR

03-000.70.0


04-000.70.0

| FIG | TEILNR/PARTNR  | BEZEICHNUNG                                       | DESCRIPTION                                         | QTY |
|-----|----------------|---------------------------------------------------|-----------------------------------------------------|-----|
| AA  | 000.70.000.0AA | ERSATZSTECKER AA<br>DIGITALTACHO, 20-POLIG        | SPARE CONNECTOR AA<br>DIGITAL SPEEDOMETER, 20-PINS  | X   |
| AB  | 000.70.000.0AB | ERSATZSTECKER AB<br>STARTSCH.(LC4/LC8), 9-POLIG   | SPARE CONNECTOR AB<br>START-SWITCH(LC4/LC8), 9-PINS | X   |
| AC  | 000.70.000.0AC | ERSATZSTECKER AC<br>LICHT VORNE, 6-POLIG          | SPARE CONNECTOR AC<br>FRONT LIGHT, 6-PINS           | X   |
| AD  | 000.70.000.0AD | ERSATZSTECKER AD<br>LICHT-BLINKSCHALTER, 12-POLIG | SPARE CONNECTOR AD<br>LIGHT-FLASH-SWITCH, 12-PINS   | X   |
| AE  | 000.70.000.0AE | ERSATZSTECKER AE<br>STARTRELAIS, 4-POLIG          | SPARE CONNECTOR AE<br>START RELAY, 4-PINS           | X   |
| AF  | 000.70.000.0AF | ERSATZSTECKER AF<br>RELAIS, 4-POLIG               | SPARE CONNECTOR AF<br>RELAY, 4-PINS                 | X   |
| AG  | 000.70.000.0AG | ERSATZSTECKER AG<br>DREHZAHLMESSER, 3-POLIG       | SPARE CONNECTOR AG<br>TACHOMETER, 3-PINS            | X   |
| AH  | 000.70.000.0AH | ERSATZSTECKER AH<br>BREMSE, BLINKER, 2-POLIG      | SPARE CONNECTOR AH<br>BRAKE, FLASHER, 2-PINS        | X   |
| AI  | 000.70.000.0AI | ERSATZSTECKER AI<br>DIODEN, 2-POLIG               | SPARE CONNECTOR AI<br>DIODE, 2-PINS                 | X   |
| AJ  | 000.70.000.0AJ | ERSATZSTECKER AJ<br>HINTERBREMSE, 3-POLIG         | SPARE CONNECTOR AJ<br>REAR BRAKE, 3-PINS            | X   |
| AK  | 000.70.000.0AK | ERSATZSTECKER AK<br>BREMSE, BLINKER, 2-POLIG      | SPARE CONNECTOR AK<br>BRAKE, FLASHER, 2-PINS        | X   |
| AL  | 000.70.000.0AL | ERSATZSTECKER AL<br>KUPPLUNG, 2-POLIG             | SPARE CONNECTOR AL<br>CLUTCH, 2-PINS                | X   |
| AM  | 000.70.000.0AM | ERSATZSTECKER AM<br>VERGASER, GÄNGE, 3-POLIG      | SPARE CONNECTOR AM<br>CARBURETOR, GEAR, 3-PINS      | X   |
| AN  | 000.70.000.0AN | ERSATZSTECKER AN<br>TACHO, 4-POLIG                | SPARE CONNECTOR AN<br>SPEEDOMETER, 4-PINS           | X   |
| AO  | 000.70.000.0AO | ERSATZSTECKER AO<br>DIGITALBOX (LC8), 26-POLIG    | SPARE CONNECTOR AO<br>DIGITALBOX (LC8), 26-PINS     | X   |
| AP  | 000.70.000.0AP | ERSATZSTECKER AP<br>ZÜNDSCHLOSS, 6-POLIG          | SPARE CONNECTOR AP<br>IGNITION LOCK, 6-PINS         | X   |
| AQ  | 000.70.000.0AQ | ERSATZSTECKER AQ<br>ZUSATZSTECKER, 1-POLIG        | SPARE CONNECTOR AQ<br>OPTIONAL CONNECTOR, 1-PIN     | X   |
| AR  | 000.70.000.0AR | ERSATZSTECKER AR<br>SEITENST., VERGASER, 3-POLIG  | SPARE CONNECTOR AR<br>SIDESTAND, CARBURETOR, 3-PINS | X   |

 \* NEUTEIL / NEW PART X NACH BEDARF / AS REQUIRED



AS

 


BB




AT



 
BC



AU

 


BD

 


AV



 BE




AX

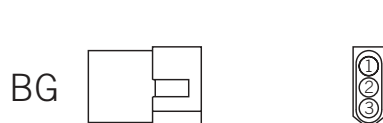


BG



 AY



BH

 

AZ



BI



BA





BJ

03-000.70.1

04-000.70.0

| FIG | TEILNR/PARTNR  | BEZEICHNUNG                                       | DESCRIPTION                                             | QTY |
|-----|----------------|---------------------------------------------------|---------------------------------------------------------|-----|
| AS  | 000.70.000.0AS | ERSATZSTECKER AS<br>ZÜNDSPULE, 2-POLIG            | SPARE CONNECTOR AS<br>IGNITION SYSTEM, 2-PINS           | X   |
| AT  | 000.70.000.0AT | ERSATZSTECKER AT<br>PICK UP, BENZINST-G., 2-POLIG | SPARE CONNECTOR AT<br>PICK UP, GAS LEVEL SENSOR, 2-PINS | X   |
| AU  | 000.70.000.0AU | ERSATZSTECKER AU<br>LÜFTER, 2-POLIG               | SPARE CONNECTOR AU<br>FAN, 2-PINS                       | X   |
| AV  | 000.70.000.0AV | ERSATZSTECKER AV<br>THERMOSCHALTER, 2-POLIG       | SPARE CONNECTOR AV<br>THERMO-SWITCH, 2-PINS             | X   |
| AX  | 000.70.000.0AX | ERSATZSTECKER AX<br>TEMPERATURSENSOR, 2-POLIG     | SPARE CONNECTOR AX<br>TEMPERATURE SENSOR, 2-PINS        | X   |
| AY  | 000.70.000.0AY | ERSATZSTECKER AY<br>ÖLDRUCK, 1-POLIG              | SPARE CONNECTOR AY<br>OIL PRESSURE, 1-PIN               | X   |
| AZ  | 000.70.000.0AZ | ERSATZSTECKER AZ<br>BLINKER HINTEN, 4-POLIG       | SPARE CONNECTOR AZ<br>FLASHER REAR, 4-PINS              | X   |
| BA  | 000.70.000.0BA | ERSATZSTECKER BA<br>OKTANANPASSUNG, 1-POLIG       | SPARE CONNECTOR BA<br>OCTANE-ADAPTION, 1-PIN            | X   |
| BB  | 000.70.000.0BB | ERSATZSTECKER BB<br>STARTSCHALTER, 9-POLIG        | SPARE CONNECTOR BB<br>START-SWITCH, 9-PINS              | X   |
| BC  | 000.70.000.0BC | ERSATZSTECKER BC<br>LICHT VORNE, 6-POLIG          | SPARE CONNECTOR BC<br>LIGHT FRONT, 6-PINS               | X   |
| BD  | 000.70.000.0BD | ERSATZSTECKER BD<br>BLINK-LICHTSCHALTER, 12-POLIG | SPARE CONNECTOR BD<br>FLASH-LIGHT-SWITCH, 12-PINS       | X   |
| BE  | 000.70.000.0BE | ERSATZSTECKER BE<br>DREHZAHLGEBER, 3-POLIG        | SPARE CONNECTOR BE<br>TACHOMETER TRANSM., 3-PINS        | X   |
| BF  | 000.70.000.0BF | ERSATZSTECKER BF<br>OKTANANPASSUNG, 1-POLIG       | SPARE CONNECTOR BF<br>OCTANE-ADAPTION, 1-PIN            | X   |
| BG  | 000.70.000.0BG | ERSATZSTECKER BG<br>HINTERBREMSE, 3-POLIG         | SPARE CONNECTOR BG<br>REAR BRAKE, 3-PINS                | X   |
| BH  | 000.70.000.0BH | ERSATZSTECKER BH<br>ZÜNDSCHLOSS, 6-POLIG          | SPARE CONNECTOR BH<br>IGNITION LOCK, 6-PINS             | X   |
| BI  | 000.70.000.0BI | ERSATZSTECKER BI<br>REGLER, 2-POLIG               | SPARE CONNECTOR BI<br>REGULATOR, 2-PINS                 | X   |
| BJ  | 000.70.000.0BJ | ERSATZSTECKER BJ<br>ÖLDRUCK, 1-POLIG              | SPARE CONNECTOR BJ<br>OIL PRESSURE, 1-PIN               | X   |

\* NEUTEIL / NEW PART X NACH BEDARF / AS REQUIRED

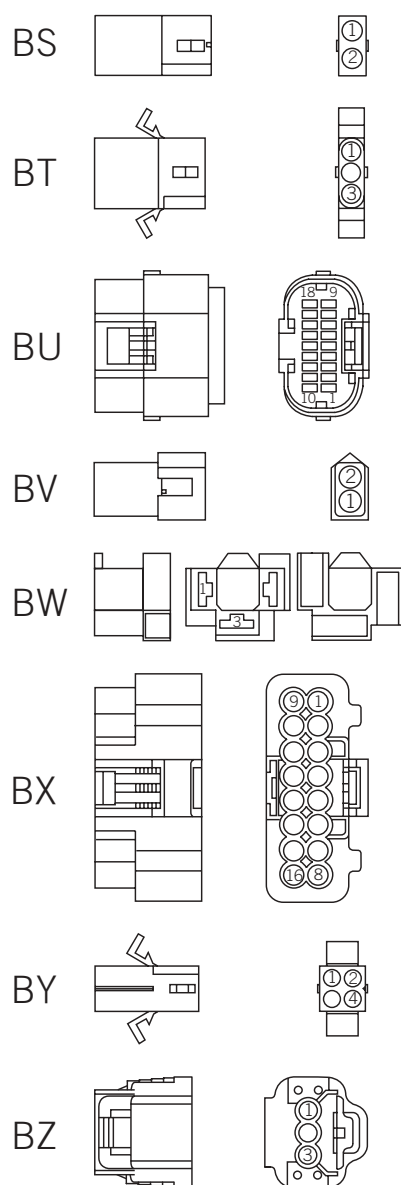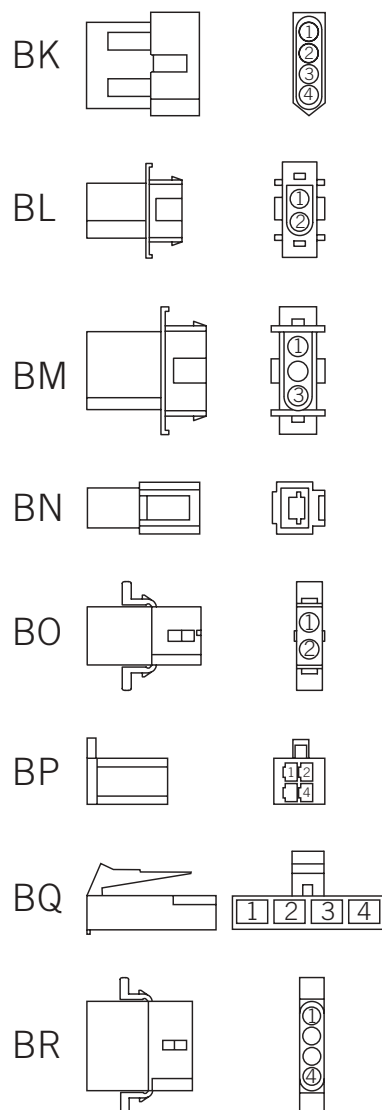


03-000.70.2

04-000.70.0

| FIG | TEILNR/PARTNR  | BEZEICHNUNG                                      | DESCRIPTION                                         | QTY |
|-----|----------------|--------------------------------------------------|-----------------------------------------------------|-----|
| BK  | 000.70.000.0BK | ERSATZSTECKER BK<br>BLINKER HINTEN, 4-POLIG      | SPARE CONNECTOR BK<br>FLASHER REAR, 4-PINS          | X   |
| BL  | 000.70.000.0BL | ERSATZSTECKER BL<br>BLINKERKABELSTRANG, 2-POLIG  | SPARE CONNECTOR BL<br>FLASH. WIRING HARNESS, 2-PINS | X   |
| BM  | 000.70.000.0BM | ERSATZSTECKER BM<br>3-POLIG                      | SPARE CONNECTOR BM<br>3-PINS                        | X   |
| BN  | 000.70.000.0BN | ERSATZSTECKER BN<br>BATTERIEKABEL (LC4), 1-POLIG | SPARE CONNECTOR BN<br>BATTERY CABLE (LC4), 1-PIN    | X   |
| BO  | 000.70.000.0BO | ERSATZSTECKER BO<br>LICHT VORNE (RAC), 2-POLIG   | SPARE CONNECTOR BO<br>LIGHT FRONT (RAC), 2-PINS     | X   |
| BP  | 000.70.000.0BP | ERSATZSTECKER BP<br>DREHZAHLMESSER, 4-POLIG      | SPARE CONNECTOR BP<br>TACHOMETER, 4-PINS            | X   |
| BQ  | 000.70.000.0BQ | ERSATZSTECKER BQ<br>REGLER (RAC), 4-POLIG        | SPARE CONNECTOR BQ<br>REGULATOR (RAC), 4-PINS       | X   |
| BR  | 000.70.000.0BR | ERSATZSTECKER BR<br>STARTSCHALTER (RAC), 4-POLIG | SPARE CONNECTOR BR<br>START-SWITCH (RAC), 4-PINS    | X   |
| BS  | 000.70.000.0BS | ERSATZSTECKER BS<br>LÜFTERANSCHLUSS, 2-POLIG     | SPARE CONNECTOR BS<br>FAN CONNECTION, 2-PINS        | X   |
| BT  | 000.70.000.0BT | ERSATZSTECKER BT<br>3-POLIG                      | SPARE CONNECTOR BT<br>3-PINS                        | X   |
| BU  | 000.70.000.0BU | ERSATZSTECKER BU<br>CDI (HUS, RAC), 18-POLIG     | SPARE CONNECTOR BU<br>CDI (HUS, RAC), 18-PINS       | X   |
| BV  | 000.70.000.0BV | ERSATZSTECKER BV<br>BLINKERKABELSTRANG, 2-POLIG  | SPARE CONNECTOR BV<br>FLASH. WIRING HARNESS, 2-PINS | X   |
| BW  | 000.70.000.0BW | ERSATZSTECKER BW<br>LICHT, 3-POLIG               | SPARE CONNECTOR BW<br>LIGHT, 3-PINS                 | X   |
| BX  | 000.70.000.0BX | ERSATZSTECKER BX<br>DIGITALBOX (LC4), 16-POLIG   | SPARE CONNECTOR BX<br>DIGITALBOX (LC4), 16-PINS     | X   |
| BY  | 000.70.000.0BY | ERSATZSTECKER BY<br>ZÜNDSCHLOSS (HUS), 4-POLIG   | SPARE CONNECTOR BY<br>IGNITION LOCK (HUS), 4-PINS   | X   |
| BZ  | 000.70.000.0BZ | ERSATZSTECKER BZ<br>TPS (LC4), 3-POLIG           | SPARE CONNECTOR BZ<br>TPS (LC4), 3-PINS             | X   |

\* NEUTEIL / NEW PART X NACH BEDARF / AS REQUIRED

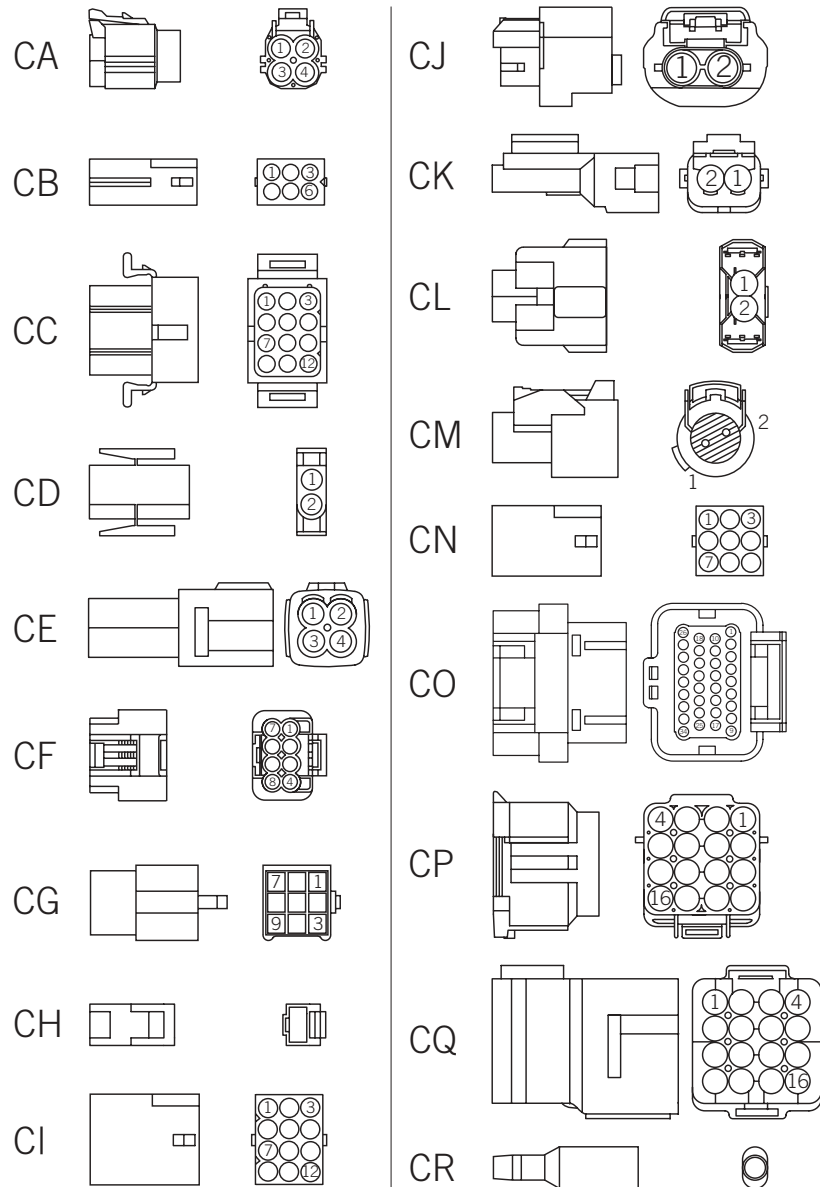

03-000.70.3

04-000.70.0

| FIG | TEILNR/PARTNR  | BEZEICHNUNG                                        | DESCRIPTION                                         | QTY |
|-----|----------------|----------------------------------------------------|-----------------------------------------------------|-----|
| CA  | 000.70.000.0CA | ERSATZSTECKER CA<br>REGLER, LAMBDA, 4-POLIG        | SPARE CONNECTOR CA<br>REGULATOR, LAMBDA, 4-PINS     | X   |
| CB  | 000.70.000.0CB | ERSATZSTECKER CB<br>SICHERUNGSKASTEN(LC4), 6-POLIG | SPARE CONNECTOR CB<br>FUSE BOX (LC4), 6-PINS        | X   |
| CC  | 000.70.000.0CC | ERSATZSTECKER CC<br>LICHT-BLINKER(DUKE), 12-POLIG  | SPARE CONNECTOR CC<br>LIGHT-FLASHER (DUKE), 12-PINS | X   |
| CD  | 000.70.000.0CD | ERSATZSTECKER CD<br>LÜFTER (DUKE), 2-POLIG         | SPARE CONNECTOR CD<br>FAN (DUKE), 2-PINS            | X   |
| CE  | 000.70.000.0CE | ERSATZSTECKER CE<br>REGLER, LAMBDA, 4-POLIG        | SPARE CONNECTOR CE<br>REGULATOR, LAMBDA, 4-PINS     | X   |
| CF  | 000.70.000.0CF | ERSATZSTECKER CF<br>CDI-MINI, 8-POLIG              | SPARE CONNECTOR CF<br>CDI-MINI, 8-PINS              | X   |
| CG  | 000.70.000.0CG | ERSATZSTECKER CG<br>TACHO (MILITÄR), 9-POLIG       | SPARE CONNECTOR CG<br>SPEEDOMETER(MILITARY), 9-PINS | X   |
| CH  | 000.70.000.0CH | ERSATZSTECKER CH<br>BATTERIEKABEL (LC4), 1-POLIG   | SPARE CONNECTOR CH<br>BATTERY CABLE (LC4), 1-PIN    | X   |
| CI  | 000.70.000.0CI | ERSATZSTECKER CI<br>LICHT DUKE, 12-POLIG           | SPARE CONNECTOR CI<br>LIGHT DUKE, 12-PINS           | X   |
| CJ  | 000.70.000.0CJ | ERSATZSTECKER CJ<br>LICHT DUKE, 2-POLIG            | SPARE CONNECTOR CJ<br>LIGHT DUKE, 2-PINS            | X   |
| CK  | 000.70.000.0CK | ERSATZSTECKER CK<br>ABGASVENTIL, 2-POLIG           | SPARE CONNECTOR CK<br>EXHAUST VALVE, 2-PINS         | X   |
| CL  | 000.70.000.0CL | ERSATZSTECKER CL<br>EINSPRITZVENTILE, 2-POLIG      | SPARE CONNECTOR CL<br>INJECTION-VALVE, 2-PINS       | X   |
| CM  | 000.70.000.0CM | ERSATZSTECKER CM<br>LUFTTEMPERATURSENSOR, 2-POLIG  | SPARE CONNECTOR CM<br>AIR-TEMPERAT. SENSOR, 2-PINS  | X   |
| CN  | 000.70.000.0CN | ERSATZSTECKER CN<br>RÜCKLICHT(LC8-D), 9-POLIG      | SPARE CONNECTOR CN<br>REAR LIGHT(LC8-D), 9-PINS     | X   |
| CO  | 000.70.000.0CO | ERSATZSTECKER CO<br>STEUERGERÄT (LC8-D), 34-POLIG  | SPARE CONNECTOR CO<br>ELECTR.CONTROL(LC8-D),34-PINS | X   |
| CP  | 000.70.000.0CP | ERSATZSTECKER CP<br>AIRBOX, 16-POLIG               | SPARE CONNECTOR CP<br>AIRBOX, 16-PINS               | X   |
| CQ  | 000.70.000.0CQ | ERSATZSTECKER CQ<br>AIRBOX(KABELSTRANG), 16-POLIG  | SPARE CONNECTOR CQ<br>AIRBOX(WIRINGHARNES),16-PINS  | X   |
| CR  | 000.70.000.0CR | ERSATZSTECKER CR<br>ZÜNDSPULE, 1-POLIG             | SPARE CONNECTOR CR<br>IGNITION SYSTEM, 1-PIN        | X   |

\* NEUTEIL / NEW PART X NACH BEDARF / AS REQUIRED



KTM-Sportmotorcycle AG  
A-5230 Mattighofen  
[www.ktm.at](http://www.ktm.at)

KTM Group Partner



3208200

